




# Chemical Balance Factors

## Ideal PH

pH is the measure of acid versus base It is measured on a scale from 0 to 14.

The *acceptable* operating range for pH is 7.2-7.8

The *ideal* operating range for pH is 7.4-7.6

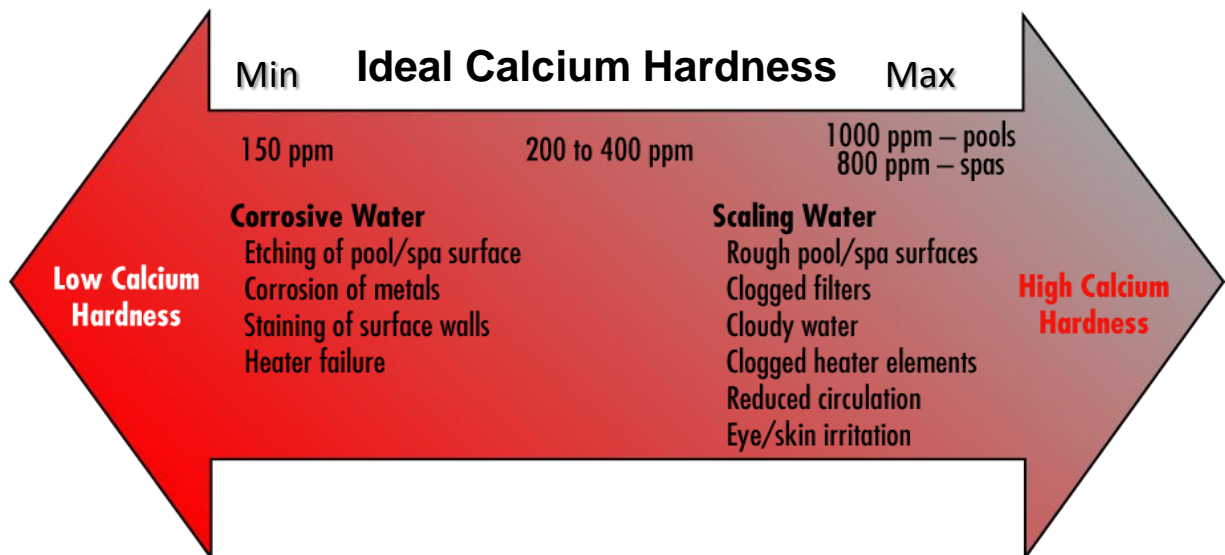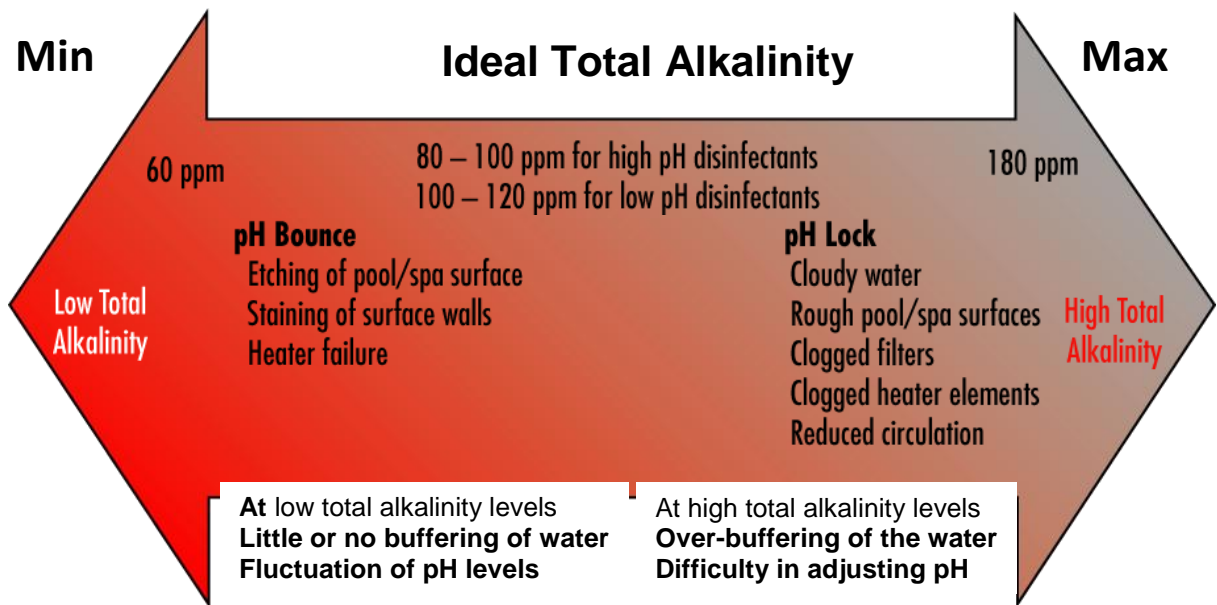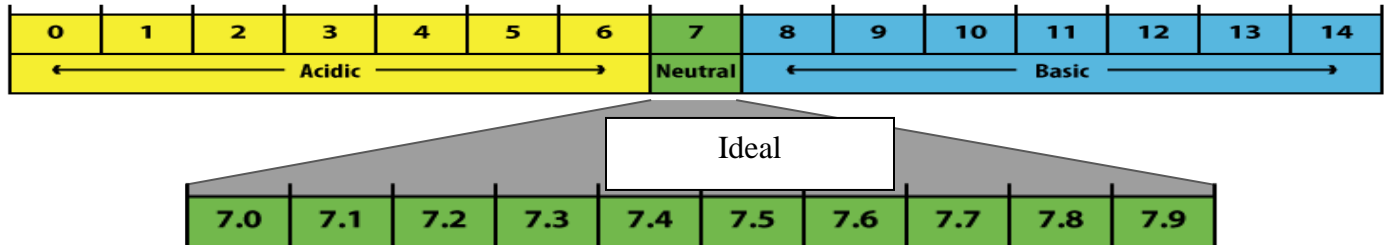

**Ideal TDS keep below 2000 ppm**